 

 


 

 
 
 
 

 

 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|---------------|
|  | Power On |  | Power |
|  | Power Off |  | Shift + Power |
|  | Mute |  | Mute |
|  | DVD |  | Shift + 2 |
|  | CD |  | Shift + 3 |
|  | Tape |  | Shift + 4 |
|  | Vid 1 / VCR |  | Shift + 5 |
|  | Vid 2 / TV |  | Shift + 6 |
|  | Vid 3 / CBL/SAT |  | Shift + 7 |
|  | Vid. 4 |  | Shift + 8 |
|  | DIM |  | Guide |
|  | AM / FM |  | Shift + 9 |
|  | 6/8 CH. |  | Shift + 0 |
|  | PR + / Sleep |  | Ch + |
|  | PR - / Surr. |  | Ch - |
|  | Test |  | Smart |
|  | Night |  | Media |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------|
|  | Input |  | AV |
|  | Vol + |  | Vol + |
|  | Vol - |  | Vol - |
|  | CH. / [=?] |  | Shift + Guide |
|  | Menu / SPKR. |  | Menu |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Set |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Digital / [=X] |  | Exit |
|  | Delay / Normal |  | Back |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |



