





Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	iPod Menu		Menu / Home
	Menu Up		Up
	Source		AV / Input / RDS
	I<<		I<< / Preset-
	Enter		OK
	>>I		>>I / Preset+
	Mem Time		TV/Radio /
	Menu Down		Down
	Play / Pause		Play / Slow
	Treble +		CH+ / Page+
	Bass +		Right
	Volume +		Vol+
	Treble -		CH- / Page-
	Bass -		Left

Originalfernbedienung    Ersatzfernbedienung

	Volume -		Vol-

