

 

 

 

 

 

 

 





 

 



 











**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / AV		0
	0 / AV		AV / Input / RDS
	CH/TR. -		CH- / Page-
	CH/TR. +		CH+ / Page+
	Rec / OTR		Rec / Rec Mode
	Up / Play / Slow		Up
	Up / Play / Slow		Play / Slow




 




**Originalfernbedienung    Ersatzfernbedienung**

	Pause / Still		Pause / Step / Freeze
	Left / << /  <<		Left
	Left / << /  <<		<< / Tune-
	Left / << /  <<		<< / Preset-
	Right / >> / >>		Right
	Right / >> / >>		>>  / Preset+
	Right / >> / >>		>> / Tune+
	Down / Stop		Down
	Down / Stop		Stop / Hold
	Enter		OK
	Index		Info / Angle
	Cancel		Exit / Cancel / Clear
	Menu		Menu / Home
	Timer Rec		Sleep / Timer
	Program		TV/Radio /
	Call		D.Menu / Top
	Clock / Counter		Red / Netflix / Search





Originalfernbedienung    Ersatzfernbedienung

	Counter Reset		Green / APP / Repeat
	Zero / Return		Yellow / YouTube / Repeat
	Zero / Return		Back / Return
	Speed SP/LP		Display / Media
	TV / VCR		Smart / List
	Audio Select		Audio / Lang I/II
	Eject		Eject / Surround

Originalfernbedienung    Ersatzfernbedienung