





 















 




 


 









 

















 











Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Pro. List		Smart / List
	0		0
	Last		Back / Return
	Info		Info / Angle
	Up		Up
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	EPG		Guide / EPG / -/--
	Down		Down
	Text		Text / Goto
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	I/I-II		Display / Media
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡i]/Index		Shift + AV / Input / RDS





Originalfernbedienung Ersatzfernbedienung

MIX	[/≡]/Mix	SHIFT + GOTO TEXT	Shift + Text /
SIZE	[≡♦]/Size	SIZE ZOOM	Zoom / Size
SUBTITLE	[≡B]/Subtitle	EQ SUBTITLE	Subtitle / EQ
HOLD	[≡+]/Hold	HOLD	Stop / Hold
REVEAL	[≡?]/Reveal	SHIFT + ANGLE INFO	Shift + Info / Angle
SOUND	(·)/Sound	TITLE SOUND	Sound / Title
PIC	[]/Pict	FORMAT PICTURE	Picture / Format
FAV	♥/FAV	PC FAV MARKER	Fav / Marker / PC
FREEZE	*/Freeze	OPT-TOOLS SETUP	Setup / OPT /
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
ASPECT	[<>]/Aspect	TOP MENU D.MENU	D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

