



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	V.Format		Shift + Picture / Format
	Sleep		Sleep / Timer
	Text		Text / Goto
	TV / Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[[≡]]		Smart / List
	0		0

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Vol -		Vol-
	Vol +		Vol+
	CH -		CH- / Page-
	CH +		CH+ / Page+
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Page Down		Shift + CH- /
	Down		Down
	Page Up		Shift + CH+ /
	FAV		Fav / Marker / PC
	Guide		Guide / EPG / -/-
	Info		Info / Angle





Originalfernbedienung Ersatzfernbedienung

	✓		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / Audio		Yellow / YouTube / Repeat
	Yellow / Audio		Audio / Lang I/II
	Blue / Subtitle		Blue / Prime Video / Random
	Blue / Subtitle		Subtitle / EQ
	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	>[≡]		Shift + Text /
	I>		Shift + Pause / Step /
	<<		<< / Tune-
	>>		>> / Tune+
	Zoom		Zoom / Size
	> <		Shift + Stop /

Hold

Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	>>I		>>I / Preset+
	SAT		Shift + 0
	Picture		Picture / Format
	Book		Setup / OPT /
	Book 2		Shift + Setup / OPT / Tools

