




 

 

 

 

 
 



Originalfernbedienung Ersatzfernbedienung

	On / Standby		Power
	Dimmer		Subt
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Clear / Del		Exit
	Prog / Direct	 + 	Shift + Sleep
	Random		D. Menu

Originalfernbedienung Ersatzfernbedienung

	Repeat		Text
	Source		AV
	Tuner		TV/R
	<< / TU -		<<
	>> / TU +		>>
	I<< / CH - / Play Rev		I<<
	I<< / CH - / Play Rev		Ch -
	>>I / CH + / Play		>>I
	>>I / CH + / Play		Ch +
	CD Play / Pause		Play
	Stop		Stop
	USB/iPod		Pause
	Volume +		Vol +
	Volume -		Vol -
	SDB / Tone		Options
	Mute		Mute
	Folder Mode		Smart



