













Originalfernbedienung Ersatzfernbedienung




 




 


 

 

 

 

 

	Off / On		Power
	Rec Pause		Rec / Rec Mode
	Sleep		Sleep / Timer
	Easy Play CD		Yellow / YouTube / Repeat
	Easy Play Tape		Green / APP / Repeat
	Easy Play Tuner		Red / Netflix / Search
	Selector Digital AUX		Shift + 7
	Selector VCR		Shift + 4
	Selector VDP		Smart / List
	CD 10Key		Fav / Marker / PC
	Tuner 10Key		Shift + Fav / Marker / PC
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	CD Play		Play / Slow
	CD Pause		Pause / Step / Freeze
	CD Stop		Stop / Hold
	CD >10		Guide / EPG / -/-
	CD I<<		I<< / Preset-
	CD >>I		>>I / Preset+
	CD Program		TV/Radio /
	CD Cancel		Exit / Cancel / Clear
	Open / Close		Eject / Surround
	Turntable Play Reverse		Right
	Turntable Stop		OK
	Super Bass		Audio / Lang I/II
	Tape Deck 1 / 2		Display / Media




Originalfernbedienung Ersatzfernbedienung

	Tape Pause	 + 	Shift + Pause / Step /
	Tape Play		Left
	Tape Stop	 + 	Shift + Stop /
	Tape Play	 + 	Shift + Play /
	Tape <<		<< / Tune-
	Tape >>		>> / Tune+
	Muting -20dB		Mute / Dimmer
	Volume -		Vol-
	Volume +		Vol+

Originalfernbedienung Ersatzfernbedienung

