



Originalfernbedienung Ersatzfernbedienung

|   |              |   |                |
|---|--------------|---|----------------|
|    | Power        |    | Power          |
|    | Mute         |    | Mute           |
|    | Input        |    | AV             |
|    | TV / TXT     |    | Text           |
|    | Cancel       |    | Shift + Exit   |
|    | Hold         |    | Shift + Stop   |
|    | Size         |    | Eject          |
|    | Subpage      |    | Shift + Subt   |
|    | Reveal       |    | Options        |
|    | << REW       |    | <<             |
|    | >> FF        |    | >>             |
|   | I<< Preview  |   | I<<            |
|  | >>I Next     |  | >>I            |
|  | Play / Pause |  | Play           |
|  | Play / Pause |  | Pause          |
|  | Stop         |  | Stop           |
|  | Picture      |  | Shift + Format |



 





 

 

 




 

 

 


 
 

 

 

 


Originalfernbedienung Ersatzfernbedienung

|   |                 |   |              |
|---|-----------------|---|--------------|
|    | Sound           |    | Shift + Dual |
|    | I-II / Nicam/A2 |    | Dual         |
|    | Sleep           |    | Sleep        |
|    | Subtitle        |    | Subt         |
|    | Pic Format      |    | Format       |
|    | Red             |    | Red          |
|    | Green           |    | Green        |
|    | Yellow          |    | Yellow       |
|    | Blue            |    | Blue         |
|    | Menu            |    | Menu         |
|    | EPG             |    | Guide        |
|   | Up              |   | Up           |
|  | Left            |  | Left         |
|  | OK / Enter      |  | Ok           |
|  | Right           |  | Right        |
|  | Down            |  | Down         |
|  | Exit            |  | Exit         |


 


 
 




**Originalfernbedienung Ersatzfernbedienung**

|   |                 |   |              |
|---|-----------------|---|--------------|
|    | Index           |    | Shift + Info |
|    | i / Display     |    | Info         |
|    | Vol +           |    | Vol +        |
|    | Vol -           |    | Vol -        |
|    | FAV             |    | Pre Ch       |
|    | Eng. / Language |    | Smart        |
|    | CH +            |    | Ch +         |
|    | CH -            |    | Ch -         |
|    | 1               |    | 1            |
|   | 2               |   | 2            |
|  | 3               |  | 3            |
|  | 4               |  | 4            |
|  | 5               |  | 5            |
|  | 6               |  | 6            |
|  | 7               |  | 7            |
|  | 8               |  | 8            |
|  | 9               |  | 9            |

**Originalfernbedienung Ersatzfernbedienung**

|   |            |   |      |
|---|------------|---|------|
|  | 0          |  | 0    |
|  | TV / Radio |  | TV/R |
|  | Return     |  | Back |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |
|   |            |   |      |

