






 










 





 
 


 










 

 








 
 

 



 

 

 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power DVD		Power
	Direct Tv Rec		TV/R
	DVD		Smart
	SD/PC		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	*/Cancel		Guide
	Input Select		AV
	CH+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	ShowView		Blue
	Manual Skip		Subt
	I<< Skip		I<<
	>>I Skip		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Direct Navigator/Top		Menu
	Function		Options
	Sub Menu		D. Menu
	Return		Back
	Up		Up
	Down		Down
	Right/II>		Right





Originalfernbedienung Ersatzfernbedienung

	<II/Left		Left
	Enter		Ok
	Prog/Check		Sleep
	Display		Info
	Status		3D
	Time Slip		Format
	Timer		Shift + AV
	Erase		Exit
	Rec Mode		Shift + Rec
	Rec		Rec
	A/Ext Link		Red
	B		Green
	C/Create Chapter		Yellow
	Audio		Dual
	Power Tv		Shift + Power
	AV Tv		Eject
	CH+ Tv		Shift + Ch +

Originalfernbedienung Ersatzfernbedienung

	CH- Tv		Shift + Ch -
	Volume+ Tv		Vol +
	Volume- Tv		Vol -

