
 
 


 


 
 


 





 




 
 
 
 
 




 




 
 

 
 

 
 
 
 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Exit
Slow Up	 Ch +	Menu Down	 Down
Stop	 Stop	Progr.	 Back
Subt.	 Subt	Next	 >>
Title	 List	Volume+	 Vol +
Pause	 Pause	Volume-	 Vol -
Pepeat/1/All	 Text	Prev.	  <<
Auto/Track	 Shift + Smart	Top Menu	 D. Menu
Rep/A-B	 Shift + Text	1	 1
Zoom	 Shift + Eject	2	 2
Menu	 Menu	3	 3
DVD/TV	 Media	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		8	
9		9	
+10		Guide	
0		0	
C/CH		Pre Ch	
Video		Sleep	
Rewind		<<	
Record		Rec	
Open/Close		Eject	
Play		Play	
F.Forward		>>	
Input Source		AV	
R/L	 + 	Shift + Dual	
Info		Info	
NTSC/PAL		Format	
Setup		Options	
EQ		Smart	
Angle		3D	
Lang		Dual	
Random		TV/R	

