










 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV / Input		AV
	<< Scan		<<
	Scan >>		>>
	I<< Skip		I<<
	Skip >>I		>>I


 

 

 
 

 



 
 

 

 

 

 













Originalfernbedienung Ersatzfernbedienung

	Pause / Step		Pause
	Play		Play
	Stop		Stop
	Home		Smart
	Menu / List		Menu
	Up / PR/CH +		Up
	Up / PR/CH +		Ch +
	Down / PR/CH -		Down
	Down / PR/CH -		Ch -
	Left		Left
	Enter		Ok
	Right		Right
	Display		Info
	Return		Back
	Audio		Dual
	Subtitle		Subt
	Zoom		Shift + Eject





Originalfernbedienung Ersatzfernbedienung

	Setup		Options
	Rec		Rec
	Rec Mode	 + 	Shift + Rec
	Thumbnail		Media
	CHP.ADD		Text
	Play Mode	 + 	Shift + Play
	Clear		Exit
	Title		List
	TV / DVD		TV/R
	Power TV	 + 	Shift + Power
	PR/CH+ TV	 + 	Shift + Ch +
	PR/CH- TV	 + 	Shift + Ch -
	Vol+ TV		Vol +
	Vol- TV		Vol -
	AV/Input TV	 + 	Shift + AV

Originalfernbedienung Ersatzfernbedienung

