 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Mute		Mute
	PR +		Ch +
	PR -		Ch -
	Vol +		Vol +
	Vol -		Vol -

Originalfernbedienung Ersatzfernbedienung

	Analog		Shift + TV/R
	Digital		TV/R
	Return		Back
	Exit		Exit
	Up		Up
	Left / Z -		Left
	Right / Z +		Right
	Down		Down
	OK		Ok
	Menu		Menu
	Presets		Smart
	List		List
	Info		Info
	Guide		Guide
	Red		Red
	Green		Green
	Yellow		Yellow





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Blue		Blue
	Purple / Text		Text

