











 


 

 

 

 









 






**Originalfernbedienung   Ersatzfernbedienung**

	Power		Power
	Stop		Stop
	Pause		Pause
	Rec		Rec
	<<		<<
	Play		Play
	>>		>>
	*		Menu
	Search		TV/R
	Bluetooth		Pre Ch
	TV Guide		Guide
	List		List
	Sources		AV
	Smart Tv		Smart
	Home		Shift + Smart
	Exit/TV		Exit
	Red		Red


 
 

 
 
 
 


 

 

 




 
 

 
 

 
**Originalfernbedienung   Ersatzfernbedienung**

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Info		Info
	Options		Options
	←/Back		Back
	[<>]/Format		Format
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Netflix		Media
	CH+		Ch +





Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Subtitle	 Subt
 Text	 Text

Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

