 
 



 

 
 






 

 
 
 
 
 

 
 
 


 
 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	Sync Menu		Menu
	I<<		I<<
	Pause		Pause
	Stop		Stop
	>>I		>>I
	<<		<<
	Play		Play
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Guide		Guide
	[i+]/[?]		Info
	Return		Back

Originalfernbedienung Ersatzfernbedienung

	Options		Options
	Home		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Digital/Analog		Media
	[+]		3D
	Scene		TV/R
	Audio		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	7		7				
	8		8				
	9		9				
	0		0				
	[≡]		Text				
	[...]		Subt				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				
	CH/Prog+		Ch +				
	CH/Prog-		Ch -				
	Recall		Pre Ch				

