






 
 

 



 

 

 




 
 


 
 





 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	EPG		Guide
	Menu		Menu
	P +		Shift + Ch +
	P -		Shift + Ch -

Originalfernbedienung Ersatzfernbedienung

	Up / CH +		Up
	Down / CH -		Down
	Right / Vol +		Right
	Up / CH +		Ch +
	Right / Vol +		Vol +
	Down / CH -		Ch -
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Exit		Exit
	FAV		Pre Ch
	S-T		Subt
	TV / Radio		TV/R
	TXT		Text
	Red / ←		Red
	Red / ←		Back
	Blue		Blue





Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung

	Green		Green
	Yellow / Lang		Yellow
	Yellow / Lang		Dual

