







 












 

 





 



 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------|
|  | Power |  | Power |
|  | Source |  | AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | /-- |  | Guide |
|  | PRE-CH |  | Pre Ch |
|  | TV |  | TV/R |
|  | CH.MGR |  | Smart |
|  | Wiselink |  | Media |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-------|
|  | Stop |  | Stop |
|  | << |  | << |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | >> |  | >> |
|  | Mute |  | Mute |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | P- |  | Ch - |
|  | P+ |  | Ch + |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | Ok |
















 












Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|----------------|
|  | [≡?]/Info |  | Info |
|  | [≡+]/PIP |  | 3D |
|  | TTX/MIX |  | Text |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | I-II/Dual |  | Dual |
|  | (O)/SRS |  | Back |
|  | Source (Green) |  | Shift + AV |
|  | PC |  | List |
|  | [▼]/STTL |  | Subt |
|  | [<>]/Size |  | Format |
|  | [≡◆]/P.Mode |  | Shift + Format |
|  | [≡]/S.Mode |  | Options |
|  | Sleep |  | Sleep |
|  | Power Cable |  | Shift + Power |




















 











Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------------|
|  | 1 Cable |  | Shift + 1 |
|  | 2 Cable |  | Shift + 2 |
|  | 3 Cable |  | Shift + 3 |
|  | 4 Cable |  | Shift + 4 |
|  | 5 Cable |  | Shift + 5 |
|  | 6 Cable |  | Shift + 6 |
|  | 7 Cable |  | Shift + 7 |
|  | 8 Cable |  | Shift + 8 |
|  | 9 Cable |  | Shift + 9 |
|  | 0 Cable |  | Shift + 0 |
|  | P+ Cable |  | Shift + Ch + |
|  | P- Cable |  | Shift + Ch - |

 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | TV |  | TV/R |
|  | << |  | << |
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | >> |  | >> |






 








 









Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-------|
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Enter |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | [≡?]/Info |  | Info |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |












 






 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | PRE-CH |  | Pre Ch |
|  | TV |  | TV/R |
|  | Sleep |  | Sleep |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | << |  | << |






 
 






 

 

 












Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------|
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | >> |  | >> |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | [≡?]/Info |  | Info |
|  | [<>]/Size |  | Format |
|  | Source |  | AV |
| | | | |
| | | | |
| | | | |







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | TV |  | TV/R |
|  | << |  | << |
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | >> |  | >> |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-------|
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Up |  | Up |
|  | Enter |  | Ok |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | [≡?]/Info |  | Info |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

