 



 

 

 

 

 

 
 
 

 

 







 

 



 


 

 

 

 







 

 

 
 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------------------|
|  | D.Menu |  | D.Menu / Top |
|  | Power |  | Power |
|  | Open / Close |  | Eject / Surround |
|  | Info |  | Info / Angle |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |
|  | Audio I/II |  | Audio / Lang I/II |
|  | Subtitle |  | Subtitle / EQ |
|  | CH. List |  | Smart / List |
|  | Screen |  | TV/Radio / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------------------|
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Source |  | AV / Input / RDS |
|  | 0 |  | 0 |
|  | Q.View |  | Shift + Menu / |
|  | Mute |  | Mute / Dimmer |
|  | Guide |  | Guide / EPG / -/- |
|  | Vol + |  | Vol+ |
|  | P+ |  | CH+ / Page+ |
|  | Vol - |  | Vol- |
|  | P - |  | CH- / Page- |
|  | Menu |  | Menu / Home |
|  | FAV |  | Fav / Marker / PC |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |

 

 

 

 

 

 

 

 

 

 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------------|---|-----------------------------------|
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Record |  | Rec / Rec Mode |
|  | [X] / Repeat |  | Back / Return |
|  | ▶ / Index |  | Play / Slow |
|  | ⏸ Pause |  | Pause / Step / Freeze |
|  | ■ Stop |  | Stop / Hold |
|  | Red / ◀◀ / REV |  | Shift + Red / Netflix / Search |
|  | Red / ◀◀ / REV |  | Red / Netflix / Search |
|  | Green / ▶▶ / FWD |  | Shift + Green / APP / Repeat |
|  | Green / ▶▶ / FWD |  | Green / APP / Repeat |
|  | Yellow / ◀◀◀ / Prev |  | Shift + Yellow / YouTube / Repeat |
|  | Yellow / ◀◀◀ / Prev |  | Yellow / YouTube / Repeat |
|  | Blue / ▶▶▶ / Next |  | Blue / Prime Video / Random |
|  | Blue / ▶▶▶ / Next |  | Shift + Blue / Prime |
|  | [≡] / Setup |  | Setup / OPT / |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------------|---|-----------------------------|
|  | [≡] / Setup |  | Shift + Setup / OPT / Tools |
|  | [/≡] / Title |  | Shift + Sound / Title |
|  | [...] / Search |  | Text / Goto |
|  | [...] / Search |  | Shift + Text / |
|  | [□] / 10+ |  | Shift + 9 |
|  | [□] / 10+ |  | Shift + 0 |
|  | [?] / Program |  | Shift + Guide / EPG / -/- |
|  | [♦] / A-B |  | Shift + Fav / Marker / PC |
|  | ⊙ / Angle / Rec. List |  | Shift + TV/Radio / Program |
|  | ⊙ / Angle / Rec. List |  | Shift + Sleep / Timer |
|  | D.Call |  | Shift + D.Menu / Top Menu |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

