


 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	AUTO		Smart
	PIP		Shift + Smart
	Exit		Exit
	Go To / Text		Text
	Audio I/II		Dual
	Display		Info
	Sleep		Sleep
	P+		Ch +
	P-		Ch -
	V+		Vol +
	V-		Vol -
	Red / Input		AV
	Red / Input		Shift + Red
	Green / TV		Menu
	Green / TV		Shift + Green

**Originalfernbedienung    Ersatzfernbedienung**

	Yellow / PMode		Format
	Yellow / PMode		Shift + Yellow
	Blue / SMode		Shift + Dual
	Blue / SMode		Shift + Blue
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8




**Originalfernbedienung    Ersatzfernbedienung**

	9		9
	0		0
	-/-- / +10	+	Shift + Guide
	Recall / Prog		Back
	Red / D.Setup		Red
	Red / D.Setup		Options
	Green / A-B		Green
	Yellow / Angle		Yellow
	Blue / Repeat		Blue
	Blue / Repeat	+	Shift + Text
	Subtitle		Subt
	Pause/Play / Hold		Play
	Pause/Play / Hold		Pause
	Size		3D
	D.Menu / Mix		D. Menu
	D.Disp / Reveal	+	Shift + Info
	Zoom / TXT Index	+	Shift + Eject

**Originalfernbedienung    Ersatzfernbedienung**

	I<< / Subpage		I<<
	>>I / Lang		>>I
	Stop / FAV -		Stop
	Stop / FAV -	+	Shift + Left
	<< / FAV		<<
	<< / FAV		Pre Ch
	>> / FAV+		>>
	>> / FAV+	+	Shift + Right
	Eject / EPG		Eject
	Eject / EPG		Guide
	Media		Media
	Recorder		Rec
	CH.List		List
	TV / Radio		TV/R

