











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TTX/MIX		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡+]/-/--		Guide
	[≡o]		Pre Ch
	TV		TV/R
	[≡..]/Video		AV
	[≡?]/Display		Info

Originalfernbedienung Ersatzfernbedienung

	[≡♦]/Sleep		Sleep
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/P.STD		Blue
	[≡♦]/P.Size/[<>]		Format
	Mute		Mute
	CH/P+		Ch +
	CH/P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	[≡i]/Menu		Menu

