



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Last		Back
	TV / R		TV/R
	Exit		Exit
	Up / CH +		Up

Originalfernbedienung Ersatzfernbedienung

	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	SUB-T		Subt
	Info		Info
	Text / USB		Text
	Audio		Dual
	EPG		Guide
	Favor		Pre Ch
	Red / ◀◀		Red
	Red / ◀◀		◀◀
	Green / ◀◀		Green





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Green / <<<	 <<<		
 Yellow / >>>	 Yellow		
 Yellow / >>>	 >>>		
 Blue / >>>	 Blue		
 Blue / >>>	 >>>		
 PVR	 Smart		
 •	 Rec		
 ■	 Stop		
 ▶ /	 Play		
 ▶ /	 Pause		

