
















**Originalfernbedienung    Ersatzfernbedienung**

Standby / On		Power
Muting		Mute / Dimmer
Play / Pause		Play / Slow
Play / Pause		Pause / Step / Freeze
Stop		Stop / Hold
I<< / Tuning-		<< / Tune-
>>I / Tuning+		>> / Tune+
I<< / Tuning-		I<< / Preset-
>>I / Tuning+		>>I / Preset+
Sleep		Sleep / Timer
Program		TV/Radio /
Input/Source		AV / Input / RDS
MP3		Up
I<< / Tuning-		Left
Play / Pause		OK
>>I / Tuning+		Right
Stop		Down

**Originalfernbedienung    Ersatzfernbedienung**

Volume+		Vol+
Mode		Smart / List
Next/Prog+		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Prev./Prog-		CH- / Page-
Tape 1 Rec		1
Tape 1 Rew		2
Tape 1 Play		3
Tape 1 F.FWD		4
Tape 1 Hall/Ats		5
CD/Theater		Red / Netflix / Search
Repeat		Green / APP / Repeat
Tape 2 Pre./eq		Yellow / YouTube / Repeat
CD Random		Blue / Prime Video / Random

