



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Bluetooth		9
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	>>I		>>I / Preset+
	I<<		I<< / Preset-
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	Bass+		Right
	Bass-		Left
	EQ		Subtitle / EQ
	Tre+		Up
	Tre-		Down

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

Power		Power
Optical		1
Optical		Red / Netflix / Search
Mute		Mute / Dimmer
AUX		7
AUX		Green / APP / Repeat
BT		9
BT		Yellow / YouTube / Repeat
HDMI ARC		0
HDMI ARC		Blue / Prime Video / Random
Vol+		Vol+
Vol+		Up
I<		I<< / Preset-
I<		Left
Play/Pause / Pair		OK
Play/Pause / Pair		Play / Slow
Play/Pause / Pair		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

>I		>>I / Preset+
>I		Right
Vol-		Vol-
Vol-		Down
News		Audio / Lang I/II
Movie		Picture / Format
Music		Sound / Title

