
 

 
 







 
 
 

 
 

 
 

 
 

 

 
 
 

 

 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	DVB / Analog		TV/R
	Multi Media		Media
	AV		AV
	Normal		Smart
	Vol +		Vol +
	Vol -		Vol -
	PR/Page +		Ch +
	PR/Page -		Ch -
	Up		Up
	Left		Left
	OK / Select		Ok
	Right		Right
	Down		Down
	Guide		Guide
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	Language		Dual
	Favourite		Pre Ch
	Cancel / Exit		Exit
	Menu		Menu
	Aspect		Format
	Audio I / II		Shift + Dual
	Recall		Back
	S.Effect		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	0		0
	Still		Pause
	Sleep		Sleep
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Reveal		List
	T.Cancel		Shift + Exit
	Size		Eject
	S-Code		Shift + Subt
	Hold		Stop
	Mix		Shift + Text
	Index		Info
	P.Mode		Shift + Format
	P.Still / P.Size		Shift + Pause

Originalfernbedienung Ersatzfernbedienung

	P.Swap		Shift + Back
	P.Input		Shift + AV
	P.PR +		Shift + Ch +
	P.PR -		Shift + Ch -

