




 
 
 
 



 
 
 
 



 

 



 



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV / Radio		TV/R
	Mute		Mute
	i		Info
	ALT		Back
	M/A		Smart
	Teletext		Text
	Exit		Exit
	Menu		Menu
	FAV		Pre Ch
	P/L		Media
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol +		Vol +

**Originalfernbedienung    Ersatzfernbedienung**

	Vol -		Vol -
	PG+		Ch +
	PG-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

