




 
 


 

 





 

 
 


 

 
 
 


 
 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|---------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- |  +  +  | Shift + Guide |
|  | Recall |  | Back |
|  | Sleep |  | Sleep |
|  | Nicam / A2 |  | Dual |
|  | DVB |  | Media |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|----------------|
|  | TV / AV |  | AV |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Cyan |  | Blue |
|  | 16:9 |  | Format |
|  | TXT / CC |  | Text |
|  | Display |  | Info |
|  | Picture |  +  | Shift + Format |
|  | Menu |  | Menu |
|  | Up / CH + |  | Up |
|  | Up / CH + |  | Ch + |
|  | Down / CH - |  | Down |
|  | Down / CH - |  | Ch - |
|  | Right / Vol + |  | Right |
|  | Right / Vol + |  | Vol + |
|  | Left / Vol - |  | Left |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------|--|--------------|
| | Left / Vol - | | Vol - |
| | Enter | | Ok |
| | Sound | | Shift + Dual |
| | Exit | | Exit |
| | DVB Menu | | D. Menu |
| | FAV | | Pre Ch |
| | EPG | | Guide |
| | Page + | | Shift + Ch + |
| | Page - | | Shift + Ch - |
| | List | | List |
| | Radio | | TV/R |
| | Pause | | Pause |
| | Index | | 3D |
| | Lucidity | | Smart |
| | Subpage | | Shift + Subt |
| | Size | | Eject |
| | Cancel | | Shift + Exit |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------|--|---------|
| | Hold | | Stop |
| | Subtitle | | Subt |
| | Reveal | | Options |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

