 




 
 





 




 
 

 
 
 
 

 


 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	<<		<<
	>>		>>
	Stop		Stop
	Play/Pause		Play
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	i		Info
	Rec		Rec
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Guide		Guide
	Mute		Mute
	FAV		Pre Ch
	Text		Text
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right



