 











 

 
 










 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	PIP		Play
	PIP Source		I<<
	PIP Position		<<
	PIP Size		>>
	PIP Swap		>>I
	Up		Up
	Left		Left
	Menu		Menu
	Menu		Ok
	Right		Right
	Down		Down
	Page +		Shift + Ch +
	Page -		Shift + Ch -
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Cyan		Blue
	Index		Info
	Size		Format
	Hold		Stop
	Text		Text
	Audio -		Shift + Left
	Audio MTS		Shift + Ok
	Audio +		Shift + Right
	Sleep		Sleep
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	TV		TV/R
	Scaling		Eject
	Freeze		Pause





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH		Guide
	R		Pre Ch

Originalfernbedienung Ersatzfernbedienung

