 







Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Input Select		AV
	Open/Close		Eject
	HDD		Smart
	BD/SD		Media
	Page PRV		Ch -
	Page Next		Ch +
	Delete		Exit
	←		Shift + Left
	→		Shift + Right
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	*		Guide
	#		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Dubbing		TV/R
	Navigation		List
	Option		Options
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	OK		Ok
	I<<		I<<
	>>I		>>I
	<</Slow-		<<
	Play		Play
	>>/Slow+		>>
	Rec		Rec
	Stop		Stop
	Pause		Pause
	Rec Mode	+	Shift + Rec
	On Screen		3D
	PB Mode		Format
	Mark		Text
	Progressive Scan		Sleep
	Audio		Dual
	Subtitle		Subt
	Edit	+	Shift + TV/R
	Media Manage	+	Shift + Media
	Angle		D. Menu
	Information		Info
	Set Up		Menu

