

 
 

 
 








 
 



 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Dual
	TXT		Text
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source		AV


 








 







Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	Home		Smart
	G		Guide
	i		Info
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Netflix		Media
	YouTube		Shift + Media
	*1		Format
	Prime Video		Shift + Smart
	Red		Red





Originalfernbedienung **Ersatzfernbedienung**

	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung **Ersatzfernbedienung**

