





 
 

 







 
 

 
 
 
 


 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/R		TV/R
	Mute		Mute
	Display		Shift + Info
	Mode		Options
	Time		AV
	F1		Shift + 1
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0










 
 
 


 

 
 
 
 

 




 





Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	USB		Media
	Red / Audio		Red
	Red / Audio		Dual
	Green / Pause		Green
	Green / Pause		Shift + Pause
	Yellow / Zoom		Yellow
	Yellow / Zoom		Eject
	Blue / Info		Blue
	Blue / Info		Info
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down



 

 
 




 
 

 
 
 




Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	SAT		Smart
	CH+		Ch +
	CH-		Ch -
	Recall		Back
	FAV		Pre Ch
	SUB		Subt
	Find		3D
	EPG		Guide
	TXT		Text
	Page+		Shift + Ch +
	Page-		Shift + Ch -
	F2		Shift + 2
	F3		Shift + 3
	F4		Shift + 4
	F5		Shift + 5

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Pause		Pause
	Rec		Rec

