 

 





 


 
 

 



 

 

 



 

 

 







Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off		Shift + Power
	Mute		Mute / Dimmer
	AVR		AV / Input / RDS
	DVD		Shift + 2
	CD		Shift + 3
	Tape		Shift + 5
	VID1/VCR		Shift + 4
	VID2/TV		Shift + 1
	CBL/SAT		Shift + 0
	AM/FM		Shift + 6
	Sleep		Sleep / Timer
	Test		TV/Radio /
	Vol+		Vol+
	Surr.		Eject / Surround
	Night		Zoom / Size
	[≡]		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	CH./[≡?]		Picture / Format
	SPKR/Menu		Menu / Home
	Up		Up
	Left		Left
	Set		OK
	Right		Right
	Digital/[≡X]		Setup / OPT /
	Down		Down
	Delay/Normal		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung Ersatzfernbedienung

	8		8
	Tun-M/[≡+]		Smart / List
	9		9
	0		0
	Mem/[≡◆]		D.Menu / Top
	Tuning ▲		>> / Tune+
	Red		Red / Netflix / Search
	Direct/Green		Green / APP / Repeat
	Clear/Yellow		Yellow / YouTube / Repeat
	Preset ▲		>> / Preset+
	Blue		Blue / Prime Video / Random
	Tuning ▼		<< / Tune-
	RDS/D.Skip		Display / Media
	Preset ▼		<< / Preset-
	<< DVD		Shift + << /
	> DVD		Shift + Play /
	>> DVD		Shift + >> /

Tune+




 


 




Originalfernbedienung Ersatzfernbedienung

	Stop DVD		Shift + Stop /
	Pause DVD		Shift + Pause / Step /
	I<</Skip Down		Shift + I<< / Preset-
	Skip Up/>>		Shift + >> / Preset+





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Vol+		Vol+
	Night		Zoom / Size
	[=]		Text / Goto
	Vol-		Vol-
	CH./[=?]		Picture / Format
	SPKR/Menu		Menu / Home
	Up		Up
	Left		Left
	Set		OK
	Right		Right
	Digital/[=X]		Setup / OPT /
	Down		Down
	Delay/Normal		Sound / Title
	1		1
	2		2





 

 







Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	Tun-M/[=+]		Smart / List
	9		9
	0		0
	Mem/[=◇]		D.Menu / Top
	Direct		Green / APP / Repeat
	Clear		Exit / Cancel / Clear
	Preset ▲		CH+ / Page+
	Preset ▲		Shift + >>1 / Preset+
	RDS/D.Skip		Display / Media
	Preset ▼		CH- / Page-
	Preset ▼		Shift + I<< / Preset-





Originalfernbedienung Ersatzfernbedienung





 

 

 









 


 
 

 

 

 

 


 
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power (On /Off)		Mute / Dimmer
	Power Off		Shift + Power
	PR+ VCR		CH+ / Page+
	Input VCR		AV / Input / RDS
	Vol+ VCR		Vol+
	PR- VCR		CH- / Page-
	Vol- VCR		Vol-
	SPKR/Menu		Menu / Home
	Delay/Normal		Sound / Title
	1		1
	1 VCR		Shift + 1
	2		2
	2 VCR		Shift + 2
	3		3
	3 VCR		Shift + 3
	4		4

Originalfernbedienung Ersatzfernbedienung

	4 VCR		Shift + 4
	5		5
	5 VCR		Shift + 5
	6		6
	6 VCR		Shift + 6
	7		7
	7 VCR		Shift + 7
	8		8
	8 VCR		Shift + 8
	Tun-M/[≡+]		Smart / List
	9		9
	9 VCR		Shift + 9
	0		0
	0 VCR		Shift + 0
	Mem/[≡♦]		D.Menu / Top
	Direct		Green / APP / Repeat
	Clear VCR		Shift + Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	Preset ▲/Blue		Blue / Prime Video / Random
	RDS/D.Skip		Display / Media
	<<		<< / Tune-
	<< VCR		Shift + << /
	Play		Play / Slow
	Play VCR		Shift + Play /
	>>		>> / Tune+
	>> VCR		Shift + >> /
	Rec VCR		Shift + Rec / Rec Mode
	Stop		Stop / Hold
	Stop VCR		Shift + Stop /
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	I>>		I>> / Preset+

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	<>		Play / Slow
	>>		>> / Tune+
	<<		<< / Tune-
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

