

 




 

 
 
 







 



 





 

 
 
 








**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject
	Status		AV
	PIP		3D
	Audio		Dual
	Miracast		TV/R
	Internet		Shift + Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	#		Guide
	*/Cancel		Format
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Pause		Pause
	>>I		>>I
	Stop		Stop
	[...]/CC		Subt
	X/Exit		Exit
	Pop-Up Menu/Top Menu		Menu
	Netflix		Media
	Home		Smart
	Option		Options
	Return		Back
	Up		Up





Originalfernbedienung   Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Power Tv		Shift + Power
	AV Input Tv		Shift + AV
	Tv Vol+		Vol +
	Tv Vol-		Vol -

Originalfernbedienung   Ersatzfernbedienung