



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|---------------------------|
|  | Power |  | Power |
|  | Eject |  | Eject / Surround |
|  | DVD |  +  | Shift + 2 |
|  | TUNER |  +  | Shift + 6 |
|  | PORT |  +  | Shift + Fav / Marker / PC |
|  | AUX |  +  | Shift + 7 |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Audio |  | Audio / Lang I/II |
|  | 0 |  | 0 |


















 






 
 
 
 
 
 


 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|---------------------------|
|  | Subtitle |  | Subtitle / EQ |
|  | I<< |  | I<< / Preset- |
|  | Step |  +  | Shift + Pause / Step / |
|  | Pause |  | Pause / Step / Freeze |
|  | >>I |  | >>I / Preset+ |
|  | << |  | << / Tune- |
|  | Stop |  | Stop / Hold |
|  | Play |  | Play / Slow |
|  | >> |  | >> / Tune+ |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | Tuning+ / CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Remain |  | Yellow / YouTube / Repeat |
|  | Tuning- / CH- |  | CH- / Page- |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |





Originalfernbedienung **Ersatzfernbedienung**

| | | | |
|---|-----------------|---|-----------------------------|
|  | Return |  | Back / Return |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Info |  | Info / Angle |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Tuner Memory |  | Blue / Prime Video / Random |
|  | Mo / St |  | Shift + Audio / Lang I/II |
|  | Tuner Manual |  | Smart / List |
|  | Tuner Preset |  | Display / Media |
|  | SD / HD |  | Guide / EPG / -/- |
|  | V-H/P / V-Sound |  | Setup / OPT / |
|  | P.Bass |  | Red / Netflix / Search |
|  | Sound Edit |  | Sound / Title |
|  | Logo |  | Fav / Marker / PC |
|  | Dimmer |  | Shift + Mute / Dimmer |
















Originalfernbedienung **Ersatzfernbedienung**

| | | | |
|---|------------|---|-------------------------------|
|  | Slow |  | Shift + Play / |
|  | Repeat |  | Green / APP / Repeat |
|  | Zoom |  | Zoom / Size |
|  | CD Ripping |  | D.Menu / Top |
|  | Cancel |  | Shift + Exit / Cancel / Clear |
|  | Sleep |  | Sleep / Timer |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|------------------|
|  | Power |  | Power |
|  | Source |  | AV / Input / RDS |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | CH- |  | CH- / Page- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|--------------|
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Info |  | Info / Angle |
|  | Down |  | Down |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

