


 

 

 


 

 
 







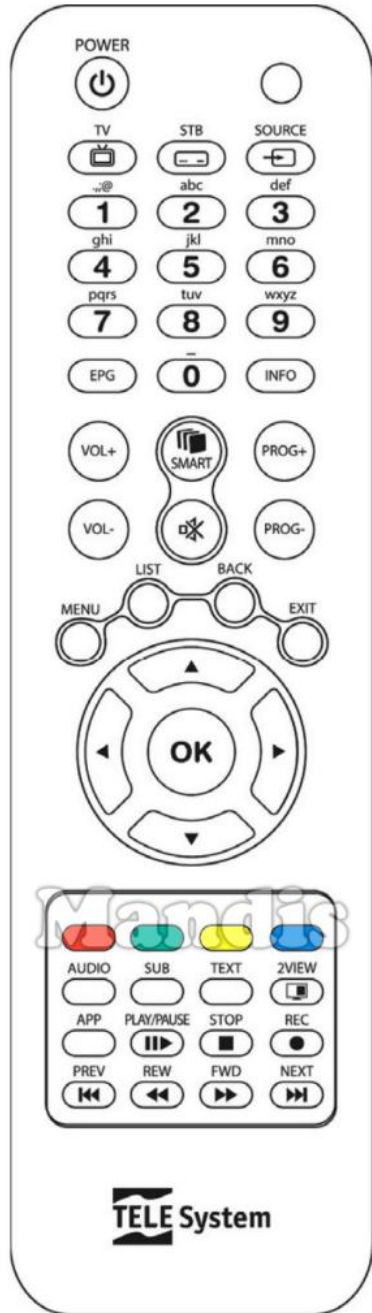
**Originalfernbedienung Ersatzfernbedienung**

|   |       |   |       |
|---|-------|---|-------|
|    | Power |    | Power |
|    | 1     |    | 1     |
|    | 2     |    | 2     |
|    | 3     |    | 3     |
|    | 4     |    | 4     |
|    | 5     |    | 5     |
|    | 6     |    | 6     |
|    | 7     |    | 7     |
|    | 8     |    | 8     |
|   | 9     |   | 9     |
|  | 0     |  | 0     |
|  | EPG   |  | Guide |
|  | Info  |  | Info  |
|  | Vol+  |  | Vol + |
|  | Vol-  |  | Vol - |
|  | Smart |  | Smart |
|  | Mute  |  | Mute  |

**Originalfernbedienung Ersatzfernbedienung**

|   |        |   |        |
|---|--------|---|--------|
|    | Prog+  |    | Ch +   |
|    | Prog-  |    | Ch -   |
|    | Menu   |    | Menu   |
|    | List   |    | List   |
|    | Back   |    | Back   |
|    | Exit   |    | Exit   |
|    | Up     |    | Up     |
|    | Left   |    | Left   |
|    | OK     |    | Ok     |
|   | Right  |   | Right  |
|  | Down   |  | Down   |
|  | Red    |  | Red    |
|  | Green  |  | Green  |
|  | Yellow |  | Yellow |
|  | Blue   |  | Blue   |
|  | Audio  |  | Dual   |
|  | Sub    |  | Subt   |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|---------------------|
|                       | Text                |                       | Text                |
|                       | 2View               |                       | TV/R                |
|                       | APP                 |                       | Media               |
|                       | Play / Pause        |                       | Play                |
|                       | Play / Pause        |                       | Pause               |
|                       | Stop                |                       | Stop                |
|                       | Rec                 |                       | Rec                 |
|                       | I<< PREV            |                       | I<<                 |
|                       | >>I NEXT            |                       | >>I                 |
|                       | << REW              |                       | <<                  |
|                       | >> FWD              |                       | >>                  |
|                       |                     |                       |                     |
|                       |                     |                       |                     |
|                       |                     |                       |                     |
|                       |                     |                       |                     |
|                       |                     |                       |                     |
|                       |                     |                       |                     |
|                       |                     |                       |                     |
|                       |                     |                       |                     |
|                       |                     |                       |                     |
|                       |                     |                       |                     |

