








 

 

 

 



 

 

 

 

 



 



 


 

 
 




 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	Input Select		AV
	HDMI		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT Link		Smart
	Clear		Exit
	Prog+		Ch +

Originalfernbedienung Ersatzfernbedienung

	Prog-		Ch -
	Time Slip		Sleep
	Info		Info
	Text		Text
	Audio		Dual
	Subtitle		Subt
	Guide		Guide
	Top Menu		Menu
	Disc Menu		D. Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Shift + Info
	Return		Back
	Red		Red




 



 




Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow / Mode		Yellow
	Blue / Search		Blue
	Blue / Search		TV/R
	<< REV		<<
	Play		Play
	>> FWD		>>
	I<< Skip		I<<
	Stop		Stop
	>>I Skip		>>I
	Pause		Pause
	VCR		Vol +
	DVD		Vol -
	Instant Skip		3D
	Dubbing		Format
	Rec		Rec
	Rec Mode		Shift + Rec

Originalfernbedienung Ersatzfernbedienung

	Setup		Options
	Timer Set		Shift + Smart
	Timer Prog		Shift + Media
	1.3x/0.8x Play		Shift + Play

