 



 

 

 

 

 

 



 




 


 



 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Info
	Mute		Mute
	TV		TV/R
	AV		AV
	Scart		Smart
	PC		Media
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Recall		Pre Ch
	Enter		Guide
	Menu		Menu
	TTX/MIX		Text
	Wide		3D
	MPX		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Red		Red





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Green		B	Green			
	Yellow		C	Yellow			
	Blue		D	Blue			
	Subtitle		AD SUBT	Subt			
	Index		DISC NAV LIST	List			
	Subpage		E-MANUAL D.MENU	D. Menu			
	Reveal		SOUND DUAL	Dual			
	Size		PICTURE FORMAT	Format			
	Hold		ZOOM	Eject			

