




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Zoom		Eject
	Subt		Subt
	Audio		Dual
	Rec		Rec
	--		Shift + Guide
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	<<		<<
	>>		>>






 

 

 

 

 

 

 



 
 
 
 

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>I		>>I
	Menu		Menu
	FAV		Pre Ch
	Up / PR+		Up
	Down / PR-		Down
	Right / Vol+		Right
	Left / Vol-		Left
	OK / List		Ok
	OK / List		List
	Exit		Exit
	EPG		Guide
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Media		Media
	Page+		Ch +





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	
Page-	Ch -
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
Recall	Back
	
TV / Radio	TV/R

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

