

**Originalfernbedienung Ersatzfernbedienung**

 
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	TV		TV/Radio /
	Dec		D.Menu / Top
	Violet/Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right

**Originalfernbedienung Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Live		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	Advance		Display / Media
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





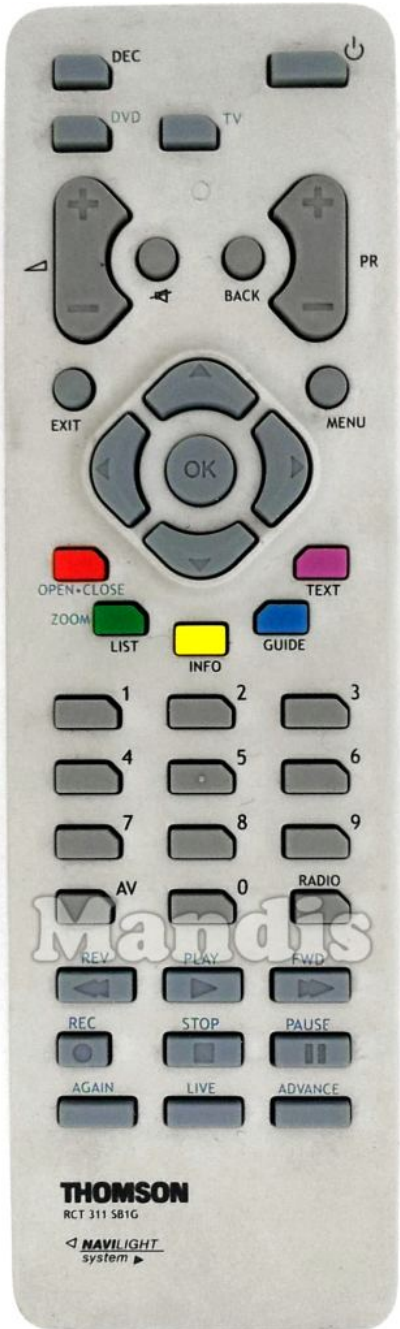

**Originalfernbedienung    Ersatzfernbedienung**

 
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	TV		TV/Radio /
	Dec		D.Menu / Top
	Violet/Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right

**Originalfernbedienung    Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Live		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	Advance		Display / Media
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





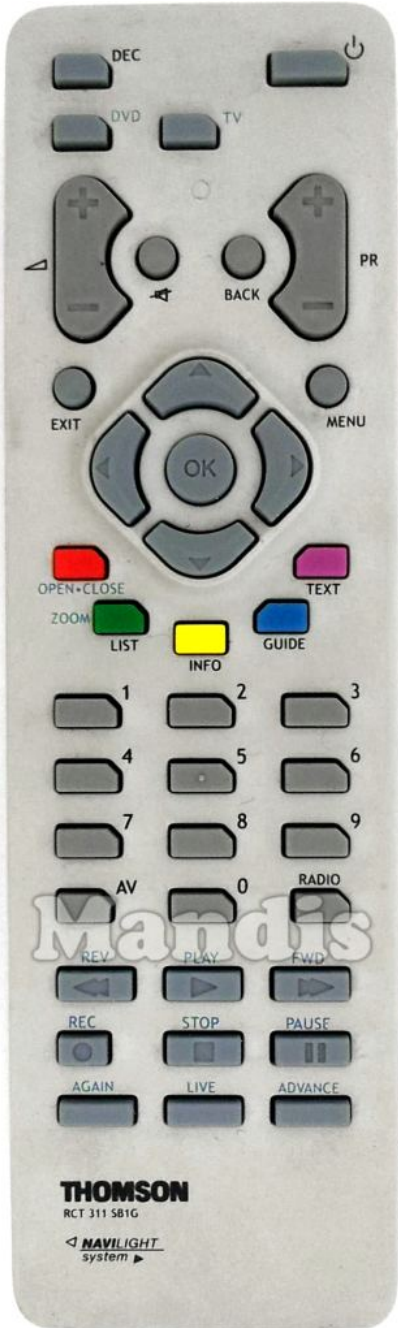

**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	TV		TV/Radio /
	Dec		D.Menu / Top
	Violet/Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right

**Originalfernbedienung    Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Live		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	Advance		Display / Media
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



