



 

 
 
 

 





 






 

 
 
 



 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide
	P<P		Pre Ch
	Menu		Menu
	[i]		Info
	Up / P+		Up
	Up / P+		Ch +










 

 
 





 
Originalfernbedienung Ersatzfernbedienung

	Down / P-		Down
	Down / P-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	I/II		Dual
	PP		Back
	TV		TV/R
	AV		AV
	Mute		Mute
	Red / Sound		Red
	Red / Sound		Shift + Dual
	Green / Picture		Format
	Green / Picture		Green
	Yellow / Feature		Yellow





Originalfernbedienung Ersatzfernbedienung

	Blue / Install		Blue
	[≡]		Text
	[≡☺]		Sleep
	[≡□]		Stop
	[≡X] / [■■■]		Exit
	[/≡][■]	 + 	Shift + Text
	[≡⇅] / [□]		Eject
	[≡?] / PC		Smart
	[≡i]		Options

Originalfernbedienung Ersatzfernbedienung

