


 

 
 
 

 





 






 

 
 



 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch
	Menu		Menu
	[ i ]		Info
	Up / P+		Up
	Up / P+		Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	Down / P-		Down
	Down / P-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	I/II		Dual
	PP		Back
	TV		TV/R
	AV		AV
	Mute		Mute
	Red / Sound		Red
	Red / Sound		Shift + Dual
	Green / Picture		Format
	Green / Picture		Green
	Yellow / Feature		Yellow





**Originalfernbedienung**   **Ersatzfernbedienung**

INSTALL	Blue / Install	<b>D</b>	Blue
	[≡]	REPEAT TEXT	Text
	[≡⊖]	PROG SLEEP	Sleep
	[≡□]		Stop
	[≡X] / [■ ■ ■]	CLEAR EXIT	Exit
	[ /≡] [ ■ ]	<b>SHIFT</b> + <b>REPEAT</b> TEXT	Shift + Text
	[≡↑] / [□]	ZOOM ▲	Eject
	[≡?] / PC	HOME SMART	Smart
	[≡i]	SETTINGS OPT	Options

**Originalfernbedienung**   **Ersatzfernbedienung**