


 














 
 

 


 



 
 


 






Originalfernbedienung Ersatzfernbedienung

	TV Direct		TV/Radio /
	Power Audio		Audio / Lang I/II
	Power DVR/DVD		OK
	Power VCR		Shift + Power
	Power STB		Power
	Power TV		Shift + OK
	DVR/DVD		Fav / Marker / PC
	VCR		Shift + Guide / EPG / -/-
	TV		Shift + TV/Radio / Program
	FM/AM		Smart / List
	Video		Shift + Red / Netflix / Search
	Tv/Video		Red / Netflix / Search
	Muting		Mute / Dimmer
	Channel+		CH+ / Page+
	Vol+		Vol+
	Channel-		CH- / Page-
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Play VCR		Play / Slow
	<< VCR		<< / Tune-
	Stop/Memory		Stop / Hold
	Pause VCR		Pause / Step / Freeze
	>> VCR		>> / Tune+
	Smart Surround/Setup		Setup / OPT /
	Display/On		Display / Media
	1 VCR		Shift + 1
	1 STB		1
	AD Input		AV / Input / RDS
	2 VCR		Shift + 2
	2 STB		2
	Decode		Shift + D.Menu / Top Menu
	3 VCR		Shift + 3
	3 STB		3
	4 VCR		Shift + 4
	4 STB		4





Originalfernbedienung Ersatzfernbedienung

	Bass Boost		Shift + Audio / Lang I/II
	5 VCR		Shift + 5
	5 STB		5
	C. Tone		Sound / Title
	6 VCR		Shift + 6
	6 STB		6
	Midnight		Shift + Smart / List
	7 VCR		Shift + 7
	7 STB		7
	8 VCR		Shift + 8
	8 STB		8
	A. Position		Yellow / YouTube / Repeat
	9 VCR		Shift + 9
	9 STB		9
	Effect		D.Menu / Top
	0 VCR		Shift + 0
	0 STB		0

Originalfernbedienung Ersatzfernbedienung

	+10 TV		Guide / EPG / -/--
	Display/Dimmer		Shift + Display / Media
	Surround		Eject / Surround
	Sleep		Sleep / Timer
	Rec Pause		Rec / Rec Mode
	Front L+		Up
	Front R+		Shift + Up
	Center+		Shift + >> /
	Test Tone		Text / Goto
	Front L-		Down
	Front R-		Shift + Down
	Center-		Shift + << /
	D.EQ.Freq		Picture / Format
	Surr L+		Shift + Right
	Surr R+		Right
	Subwfr+		Shift + CH+ /
	D.EQ.Level+		Shift + Vol+





Originalfernbedienung Ersatzfernbedienung

	Power Audio	+	Shift + Power
	Power Tv		Power
	FM/AM		Eject / Surround
	Tv Vol+		Vol+
	Channel+ TV		CH+ / Page+
	Tv Vol-		Vol-
	Channel- TV		CH- / Page-
	I<</Tuning-		I<< / Preset-
	FM Mode FM/AM	+	Shift + TV/Radio / Program
	>>I/Tuning+		>>I / Preset+
	Memory FM/AM	+	Shift + Smart / List
	TA/News/Info		Smart / List
	PTV- FM/AM		TV/Radio /
	PTV+ FM/AM		Guide / EPG / -/-
	PTV Search		Red / Netflix / Search
	Display FM/AM		Display / Media
	1 FM/AM	+	Shift + 1

Originalfernbedienung Ersatzfernbedienung

	1 TV		1
	2 FM/AM	+	Shift + 2
	2 TV		2
	3 FM/AM	+	Shift + 3
	3 TV		3
	4 FM/AM	+	Shift + 4
	4 TV		4
	5 FM/AM	+	Shift + 5
	5 TV		5
	6 FM/AM	+	Shift + 6
	6 TV		6
	7 FM/AM	+	Shift + 7
	7 TV		7
	8 FM/AM	+	Shift + 8
	8 TV		8
	9 FM/AM	+	Shift + 9
	9 TV		9






Originalfernbedienung Ersatzfernbedienung

	Power DVD		Power
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Top Menu		D.Menu / Top
	Up		Up
	Menu		Menu / Home
	Left		Shift + Left
	Enter		OK
	Right		Right
	Down		Down
	On Screen		Shift + Display / Media
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	DVD Zoom		Zoom / Size
	HDD Sound Effect		Sound / Title
	Set Up		Setup / OPT /
	1		1
	2		2
	3		3
	←		Left
	4		4
	5		5
	6		6
	VFP Progressive		Smart / List
	7		7
	8		8
	9		9
	Angle/Slide Effect		Info / Angle
	10		Guide / EPG / -/-



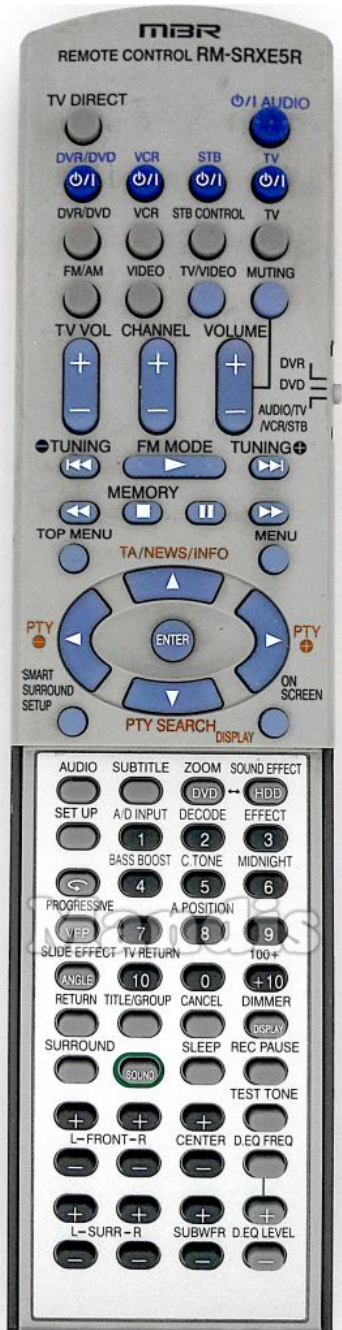

 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Channel+		CH+ / Page+
	Channel-		CH- / Page-
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Top Menu		D.Menu / Top
	Up		Up
	Menu		Menu / Home
	Left		Shift + Left
	Enter		OK
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	On Screen		Shift + Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	DVD Zoom		Zoom / Size
	HDD Sound Effect		Sound / Title
	Set Up		Setup / OPT /
	1		1
	2		2
	3		3
	←		Left
	4		4
	5		5
	6		6
	VFP Progressive		Smart / List
	7		7
	8		8
	9		9



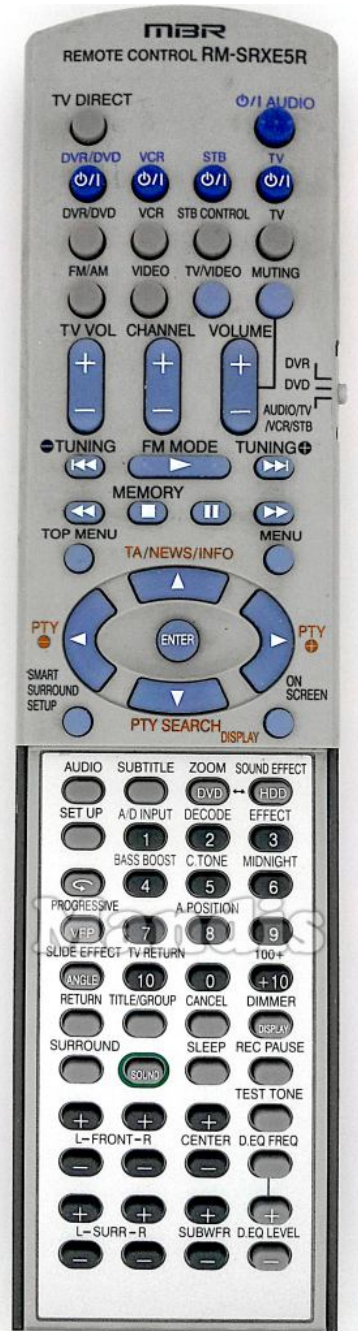

Originalfernbedienung Ersatzfernbedienung

	Angle/Slide Effect		Info / Angle
	0		0
	Return		Back / Return
	Cancel		Exit / Cancel / Clear
	Display/Dimmer		Display / Media
	Rec Pause		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

