



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject iPod	+	Shift + Pre Ch
	Eject CD		Pre Ch
	Sleep		Sleep
	Timer/Play		Blue
	Clock/Timer	+	Shift + AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide

Originalfernbedienung Ersatzfernbedienung

	Del		3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Program	+	Shift + Sleep
	Repeat		Text
	Play Mode	+	Shift + Play
	Radio		TV/R
	AUX		AV
	Play/Pause CD		Play
	Play/Pause iPod		Pause
	>>/>>		>>
	<</ <<		<<
	Stop		Stop
	Re-Master		Smart
	D.Bass		Media
	Display/Dimmer		Info



