



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	[i+]		Info
	DTT/TV		TV/R
	AV1		Shift + 1
	AV2		Shift + 2
	AV3		Shift + 3
	AV4		Shift + 4
	AV5		Shift + 5
	RGB1		Shift + 7
	RGB2		Shift + 8
	Menu		Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

**Originalfernbedienung    Ersatzfernbedienung**

	♪ / S.Mode		Shift + Dual
	⦿ / P.Mode		Shift + Format
	Vol+		Vol +
	Vol-		Vol -
	I/II		Dual
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9







