



 

 

 

 





 

 

 

 



 
 
 


 

 
 

 

 
 
 

 
 
 





 

 


 
 



 
 


 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	+10		Guide
	Sleep		Sleep
	Open/Close CD		Eject
	Play CD		Play
	Pause CD		Pause
	Stop/Clear CD		Stop

Originalfernbedienung Ersatzfernbedienung

	Search >>I/Up		>>I
	I<<		I<<
	Tuner/Band		TV/R
	Auto Preset		Smart
	Tape >		Right
	< Tape		Left
	Stop Tape		Ok
	Rec/Pause Tape		Rec
	>> Tape		>>
	<< Tape		<<
	Active Hyper-Bass		Media
	Sound		Dual
	Volume+		Vol +
	Volume-		Vol -
	Treble+		Ch +
	Treble-		Ch -
	Bass+		Up





Originalfernbedienung Ersatzfernbedienung

	Bass-		Down
	Clock		AV
	Intro		Info
	Random		Options
	Repeat		Text
	Program		Shift + Sleep
	Edit		Exit
	Side A/B		3D
	Mode		Format
	Synchro Rec		Pre Ch

Originalfernbedienung Ersatzfernbedienung

