
















 







 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Right		Right
	Down / P-		Down
	Down / P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	--		Guide / EPG / -/--
	0		0
	P < P		Fav / Marker / PC
	PP		Back / Return
	Vol+		Vol+
	I-II		Audio / Lang I/II
	Mute		Mute / Dimmer
	Vol-		Vol-
	Info		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[TV]		Shift + 1
	[TV]		TV/Radio /
	[AV]		AV / Input / RDS
	[ ≡ ]		Text / Goto





Originalfernbedienung    Ersatzfernbedienung

TIME EQ	[≡☺]	EQ SUBTITLE	Subtitle / EQ
REWIND / PAUSE	[ / ≡ ]	FORMAT PICTURE	Picture / Format
PLAY PAUSE	[≡X]	CLEAR EXIT CANCEL	Exit / Cancel / Clear
GUIDE	[≡↕]	SIZE ZOOM	Zoom / Size
TITLE LANG	[≡?]	MEDIA DISPLAY	Display / Media
OPEN/CLOSE TV/RADIO	[≡i]	LIST SMART	Smart / List

Originalfernbedienung    Ersatzfernbedienung







 

 
 




 
























**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Select		OK
	Right		Right
	Down / P-		CH- / Page-
	Down / P-		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

**Originalfernbedienung    Ersatzfernbedienung**

	9		9
	+10		Guide / EPG / -/-
	0		0
	Repeat		Green / APP / Repeat
	Search		Red / Netflix / Search
	A→B		Yellow / YouTube / Repeat
	Display		Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Prog		TV/Radio /
	C		Blue / Prime Video / Random
	Angle		Info / Angle
	Return		Back / Return
	Time		Sleep / Timer
	<<		<< / Tune-
	>>		>> / Tune+





Originalfernbedienung Ersatzfernbedienung


















	⏮		⏮ / Preset-
	⏭		>> / Preset+
	▶/⏸		Play / Slow
	⏸		Pause / Step / Freeze
	■		Stop / Hold
	Title		Sound / Title
	Open / Close		Eject / Surround

Originalfernbedienung Ersatzfernbedienung























**Originalfernbedienung    Ersatzfernbedienung**

On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Tone+		>> / Tune+
Lang		Sound / Title
Menu audio		Audio / Lang / II
Subt.List		Subtitle / EQ
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK

**Originalfernbedienung    Ersatzfernbedienung**

Menu Right		Right
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9





Originalfernbedienung Ersatzfernbedienung

Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Lang		Shift + Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung