



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVB		Media
	Prog+		Shift + Ch +
	Prog-		Shift + Ch -
	System		Smart
	Nicam/A2		List
	DVB Menu		D. Menu
	TV Format		Format
	Exit		Shift + Exit
	Info		Info
	Language		Dual
	Text		Shift + Text
	FAV		Pre Ch
	EPG		Guide
	Red / TV/Radio		Red
	Green / Audio		Green
	Yellow / Freeze		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue / Subtitle		Blue
	Blue / Subtitle		Subt
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	TV-Menu		Menu
	TV-Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	TV/AV		AV
	Display		Shift + Info
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Picture		Shift + Format
	Sound		Shift + Dual
	Mute		Mute
	Freeze		Pause
	Sleep		Sleep
	TV/TXT		Text
	Hold		Stop

Originalfernbedienung Ersatzfernbedienung

	Reveal		Options
	Cancel		Shift + Back
	Size		Eject
	Subpage		Shift + Subt
	Index		Shift + Smart

