




















 




 
 
 

 



 








 










 




 



 

 

 

Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Rec		Rec
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Status/Exit		Exit
	Clear		Shift + Exit
	Play		Play
	Stop		Stop
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	>>		>>
	<<		<<
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	> </Still		Pause
	P+		Ch +
	P-		Ch -
	Mute		Mute
	> /Index		Text
	Slow		AV
	System		Media
	Turbo Timer		Options
	SV/V+		Format



