







 
 
 









 




 

 

 

 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Recall		Back
	EPG		Guide
	Audio		Dual
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/R
	Menu		Menu
	Exit		Exit
	Record		Rec
	Stop		Stop
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	TTX		Text
	FAV		Pre Ch
	CH+		Ch +
	CH-		Ch -
	Media		Media





Originalfernbedienung Ersatzfernbedienung

PREV	I<<	⏮	I<<
PLAY	Play	▶	Play
REW	<<	⏪	<<
USB	USB	HOME SMART	Smart
NEXT	>>I	⏭	>>I
PAUSE	Pause	⏸	Pause
FWD	>>	⏩	>>
	Red	A	Red
	Green	B	Green
	Yellow	C	Yellow
	Blue	D	Blue

Originalfernbedienung Ersatzfernbedienung

