







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[i+]		Info
	[1]2 Dual Screen		Smart
	Red / Demo		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Option		Options
	Guide		Guide
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu / Browse		Menu
	Text		Text
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	P<P		Back
	<<		<<





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Stop / MHEG		Stop				
	Play		Play				
	>>		>>				
	Rec		Rec				
	FAV		Pre Ch				

