
 

 
 



**Originalfernbedienung Ersatzfernbedienung**

	Power DVD		Power
	Display		Info
	SYS Video		Back
	On/Off PBC		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Title		Pre Ch
	Repeat		Text

**Originalfernbedienung Ersatzfernbedienung**

	A-B/Repeat		Options
	Clear		Exit
	FTS/Program		Sleep
	Menu System		Menu
	Menu Disc		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Stop/Return		Stop
	Play		Play
	Pause		Pause
	>>		>>
	<<		<<
	>		>>
	<		<<





**Originalfernbedienung Ersatzfernbedienung**

	FWD Slow		Ch +
	REV Slow		Ch -
	Subtitle		Subt
	Angle		Format
	Zoom		Eject
	Audio		Dual
	Search		TV/R
	Preview		Green
	Mode Sound		Yellow
	3D Sound		3D
	Power Speakers		Shift + Power
	1-2-3 Input		AV
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Bass+		Shift + Up
	Bass-		Shift + Down

**Originalfernbedienung Ersatzfernbedienung**

	Treble+		Shift + Ch +
	Treble-		Shift + Ch -

